

Palm questions:

You said: "I used the palm pilot and don't know how to get the date thing back as the screen when it is showing."

To get to the "Big Clock" or "doodle bug", keep selecting the little house icon, which is in the display, (it scrolls you through your programs, with each tap), until you see either the "MAIN" screen or the "ALL" screen. The icons will be there in alphabetical order. The other important screen(s) available with tapping the house, are "System" which allows you to select your preferences, among other things, and then any that you create for yourself, by selecting "Edit Categories", in the drop down screen, and giving your new folder a name, such as "Games". Then you could move any game programs into the folder for quick access.

When "Big Clock" is open, your choices are at the bottom of the screen.
I.e. time, alarm, world, timer.

Additionally, That icon that appears on the bottom of the screen, just below the house icon, allows you to make changes, or to beam information to other palm compatible handhelds. No wires needed for a beam. You can also change categories, delete items and programs, or copy stuff.